



# 2248

Finger Guard

## PRODUCT CUT SHEET

### Material

Anodized Aluminum Housing

- Designed to Help Prevent Injury to Fingers Accidentally Placed in the Hinge Area of a Door
- Features an Internal Spring Mechanism that Maintains Constant Tension Against the Polyethylene Fabric Which Helps Prevent Fingers From Entering the Dangerous Area Behind the Edge of the Door
- Ideal for Senior & Childcare Facilities
- Durable "Endless Cycle" Spring Mechanism
- Fire Resistant Woven Polyethylene Fabric
- 82" for 7' Door Opening
- 38" Dutch Door Size
- Custom Lengths 12" Up To 86" Available. Order 2" Less Than Opening Height to Allow for the Stop on the Door Frame Head and Door Bottom Undercut
- Not Field Sizable
- Mounts on Push Side of Door
- Suitable for Doors Swinging Up To 180 Degrees
- #6 x 1/2" Tek Self-Drilling Screws Furnished
- 38" Standard Length
- Fire Rated Up To 3 Hours Metal Doors, 1-Hour Wood Doors

### Finishes


2248A Anodized Aluminum with White Polyethylene  
2248DKB Dark Bronze with Black Polyethylene

### Options

Available in 38", 76", 82" and 86" Standard Lengths



|               |
|---------------|
| PROJECT:      |
| SUBMITTED BY: |
| DATE:         |
| NOTES:        |

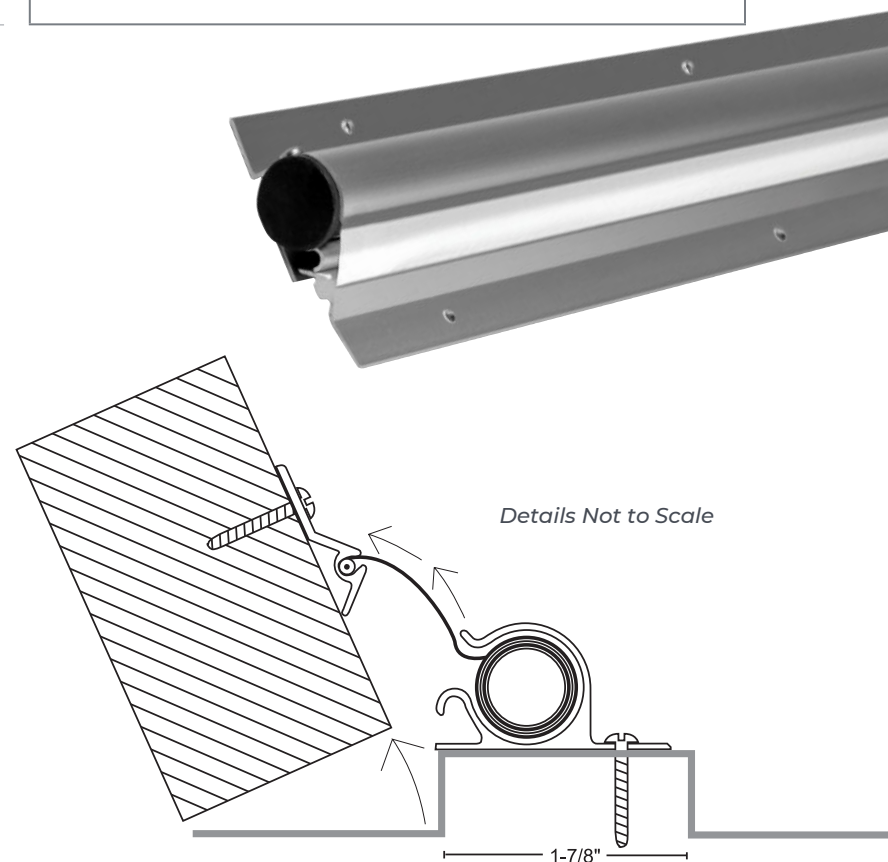


NGP-FGR-2248-PCS-0123-A

**NGP MEMPHIS**  
4985 East Raines Road  
Memphis, TN 38118  
[orders@ngp.com](mailto:orders@ngp.com)

**NGP VEGAS**  
4584 Calimesa Street  
Las Vegas, NV 89115  
[vegasorders@ngp.com](mailto:vegasorders@ngp.com)

**ngp.com**  
**1-800-NGP-RUSH**

## Finger Guard 2248

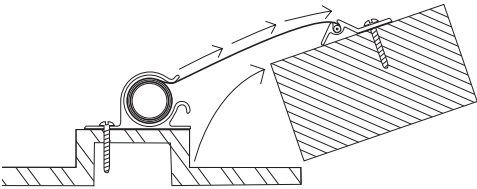

This product should be mounted before any panic bars or other surface mounted hardware.

### Installation Instructions

1. Position bottom of Fingerguard flush with bottom of door.
2. Mount roller portion on door frame soffit flush with door stop edge closest to door.
3. Mount the fabric retainer to the surface of the door, with mounting holes approx. 2-3/4" from edge of the door.

NOTE: With door closed, the two (2) metal portions should be approximately 7/8" apart to prevent pinching fingers.

Este producto debe instalarse antes que las barras de pánico u otro herraje montado en la superficie de la puerta.

### Instrucciones de Instalación

1. Coloque la parte inferior del protector de dedos para puertas al ras de la parte inferior de la puerta.
2. Instale el rodillo en el marco de la puerta con el intradós al ras de la orilla del borde más cercano a la puerta.
3. Instale el retenedor de tela en la superficie de la puerta, con orificios de montaje aproximadamente a 2-3/4" de la orilla de la puerta.

NOTA: Con la puerta cerrada, los dos (2) segmentos de metal deben de estar separados aproximadamente 7/8" para evitar pellizcarse los dedos.



POSITIVE PRES-  
SURE TESTED  
MISCELLANEOUS  
FIRE DOOR  
ACCESSORY

SOMETIDOS A PRUEBA  
DE PRESION POSITIVA  
ACCESORIO  
MISCELÁNEO PARA  
PUERTA CORTAFUEGO