



9590

Fire Door Bottom Gap Solution — Up To 90 Minutes

PRODUCT CUT SHEET

PROJECT:

SUBMITTED BY:

DATE:

NOTES:

**UL Certified for Door Bottom
Gaps — Measuring up to 1 1/2".**




- 90-Minute Rated — for Use on UL10B and UL10C Wood or Hollow Metal Fire Doors
- Restricts the Passage of Smoke
- Patent Pending
- Available in 36" and 48" Lengths
- End Caps Furnished Standard
- Non-Handed

PRODUCT CONSISTS OF:

- + #304 Brushed Stainless Steel Neoprene Sweep — Pull Side
- + #304 Brushed Stainless Steel Intumescent Shoe — Push Side
- + #304 Brushed Stainless Steel End Caps
- + #6 X 3/4" Stainless Steel SMS Furnished

FINISH:

Brushed Stainless Steel
Neoprene is Black

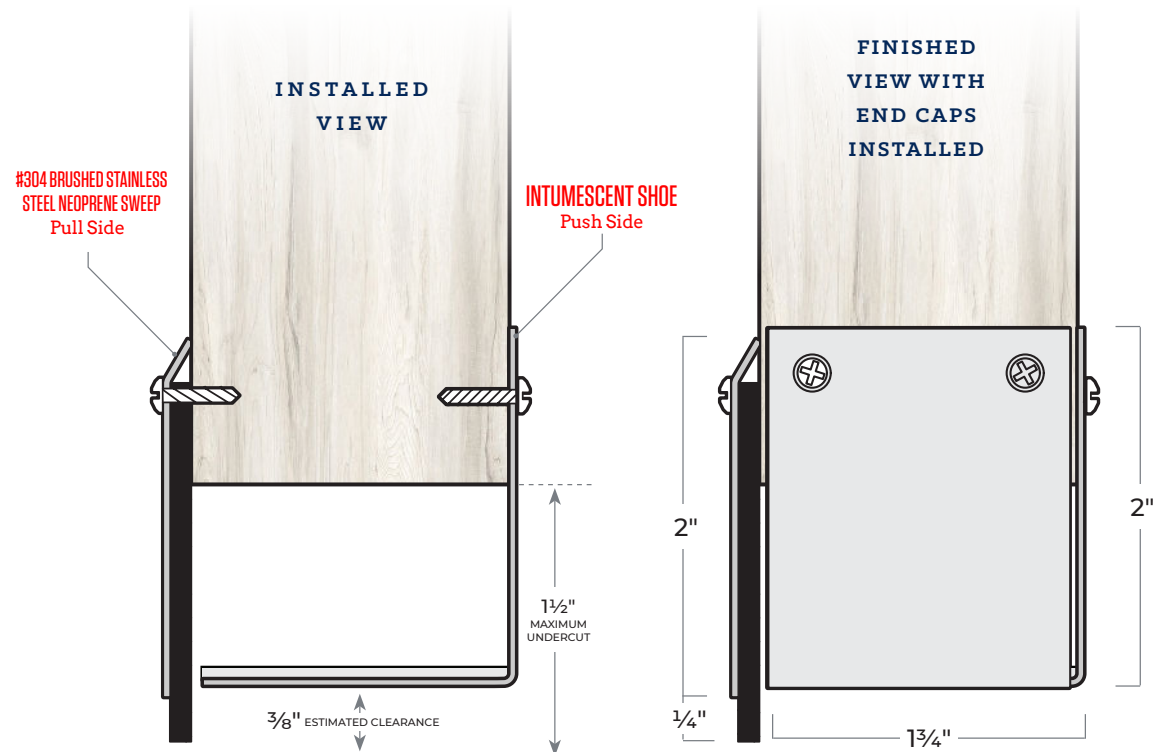

NGP-GAP-9590-PCS-0919-A

NGP MEMPHIS
4985 East Raines Road
Memphis, TN 38118
orders@ngp.com

NGP VEGAS
4584 Calimesa Street
Las Vegas, NV 89115
vegasorders@ngp.com

ngp.com
1-800-NGP-RUSH



9590


Fire Door Bottom Gap Solutions—Up To 90 Minutes

INSTALLATION INSTRUCTION

For the complete list of GapGuard™ Fire Door Accessories, the most up-to-date product information and installation instructions, scan the QR code or visit ngp.com.



WOOD DOOR INSTALLATION SHOWN

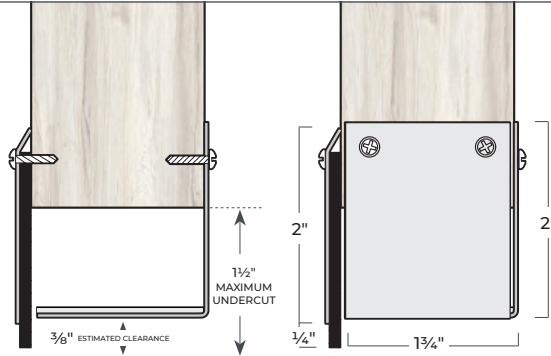

⚠ WARNING:

Neoprene products can expose you to chemicals including chloroprene, which is known to the State of California to cause cancer and/or developmental and reproductive harm. For more information, go to P65Warnings.ca.gov. Patent Pending.

For use on up to 90 minute UL10B and UL10C wood or hollow metal fire doors with bottom clearance exceeding $\frac{3}{4}$ ", up to $1\frac{1}{2}$ ". UL certified for 90 minute fire doors with bottom clearance up to $1\frac{1}{2}$ ".



POSITIVE PRESSURE TESTED
MISCELLANEOUS FIRE DOOR
ACCESSORY

6.21

Installation Instructions

L-Shaped Bottom with Intumescent (Push Side Mount):

1. Cut to fit.
2. Prep for any bottom latching hardware (ie: Concealed Vertical Rod Exit Device latch or Automatic Flush Bolt) that is installed in accordance with manufacturer's installation instructions.
3. Close door. Hold at bottom of door with $\frac{3}{8}$ " clearance above sill or floor.
4. Mark screw holes.
5. Drill pilot holes for screws using a $\frac{7}{64}$ " drill bit.
6. Install with screws provided.
7. Adjust position to $\frac{3}{8}$ " clearance above sill or floor.

Door Sweep (Pull Side Mount):

1. Cut sweep to fit.
2. Close door. Hold sweeps at bottom of door. Tap down until contact is made between the sweeps and threshold.
3. Mark screw holes.
4. Drill pilot holes for screws using a $\frac{7}{64}$ " drill bit.
5. Install with screws provided.
6. Adjust position so sweeps do not impede proper closing and latching of door.
7. Install end caps as illustrated.



NGP MEMPHIS
4985 East Raines Road
Memphis, TN 38118
orders@ngp.com

NGP VEGAS
4584 Calimesa Street
Las Vegas, NV 89115
vegasorders@ngp.com

ngp.com
1-800-NGP-RUSH

NGP-GAP-9590-PRI-0621-A