



L-700-RX, AFDL

No Vision Door Louver


PRODUCT CUT SHEET

For 1 3/4" Thick Doors

- ✦ 18 Ga. Cold Rolled Steel
- ✦ Mitered and Welded Corners
- ✦ Welded Reinforcing Clips at Corners
- ✦ Inverted "V" Design
- ✦ Blades 24 Ga. Steel; Hemmed Edges
- ✦ Counter-Sunk Mounting Screw-Holes
- ✦ #8 x 3/4" Phillips Head SMS
- ✦ Available in Uneven and Fractional Sizes
- ✦ Free Area 55%
- ✦ Gray Primer (GPZ) Powder Coat Finish

Available Options

- ✦ Powder Coat Color Options - See Color Chart on www.ngp.com
- ✦ Aluminum Insect Screen - 22 Ga. 1/8" Square Mesh Installed on Exterior Side Unless Requested Otherwise
- ✦ Torx Security Screws
- ✦ Galvanneal - A40 Steel
- ✦ Zinc Electro-Plating (Not Available on Insect Screen)

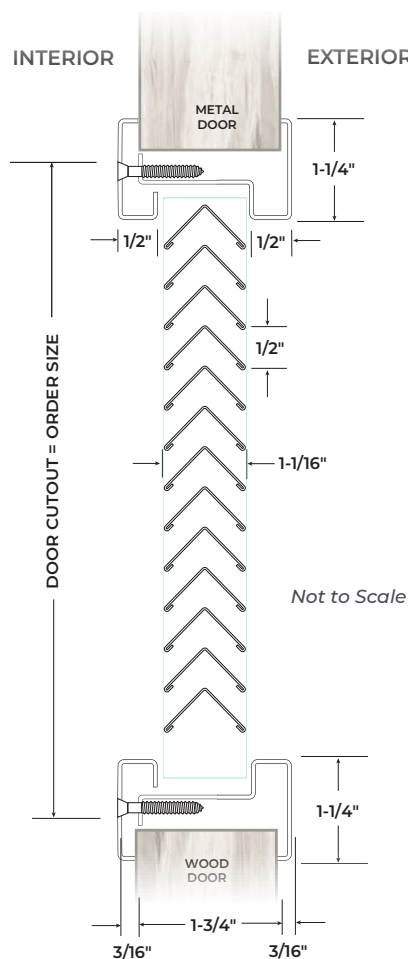

Undersized 1/8" for clearance

Designed for Use on 1 3/4" Thick Doors Manufactured Within Door Industry Tolerance of +/- 1/16".

PROJECT:
SUBMITTED BY:
DATE:
NOTES:

NGP MEMPHIS
4985 East Raines Road
Memphis, TN 38118
orders@ngp.com

NGP VEGAS
4584 Calimesa Street
Las Vegas, NV 89115
vegasorders@ngp.com

NGP-LIT-L-700-RX-PCS-0822-A

ngp.com
1-800-NGP-RUSH

L-700-RX, L-700-RX-SS, L-700-RX-316SS, L-1800, L-VRSG-2, L-VRSG-3, AFDL

Louvers: Fit 1-3/4" Thick Doors

Installation Instructions


1. Cut out door in accordance with door manufacturers procedure.
2. If door cut-outs have radius corners it may be necessary to square them out prior to installing the louver.
3. Position outer frame with louver core, in door cut out.
4. Position inner frame and insert and start all screws before fully tightening.
5. Tighten screws using crisscross pattern. Use caution when using power screw driving equipment to avoid stripping the material.

FIELD PAINTING: FOR BEST RESULTS SCUFF FINISH WITH A SCOTCH-BRITE PAD OR SAND PAPER BEFORE PAINTING.

Instrucciones de instalación

1. Recorte la abertura en la puerta siguiendo el procedimiento recomendado por el fabricante de la puerta.
2. Si las aberturas de la puerta tienen esquinas redondeadas puede que sea necesario convertirlas en ángulos rectos antes de instalar la rejilla.
3. Coloque el marco exterior con la rejilla en la abertura de la puerta.
4. Coloque el marco interior e inserte y empiece a enroscar todos los tornillos antes de apretarlos completamente.
5. Apriete los tornillos usando un patrón entrecruzado. Tenga cuidado cuando use atornilladores eléctricos para evitar dañar el material.

PINTURA EN EL ÁREA DE INSTALACIÓN: PARA OBTENER MEJORES RESULTADOS ANTES DE PINTAR LIJE CON UNA ALMOHADILLA SCOTCH-BRITE O CON PAPEL LIJA.

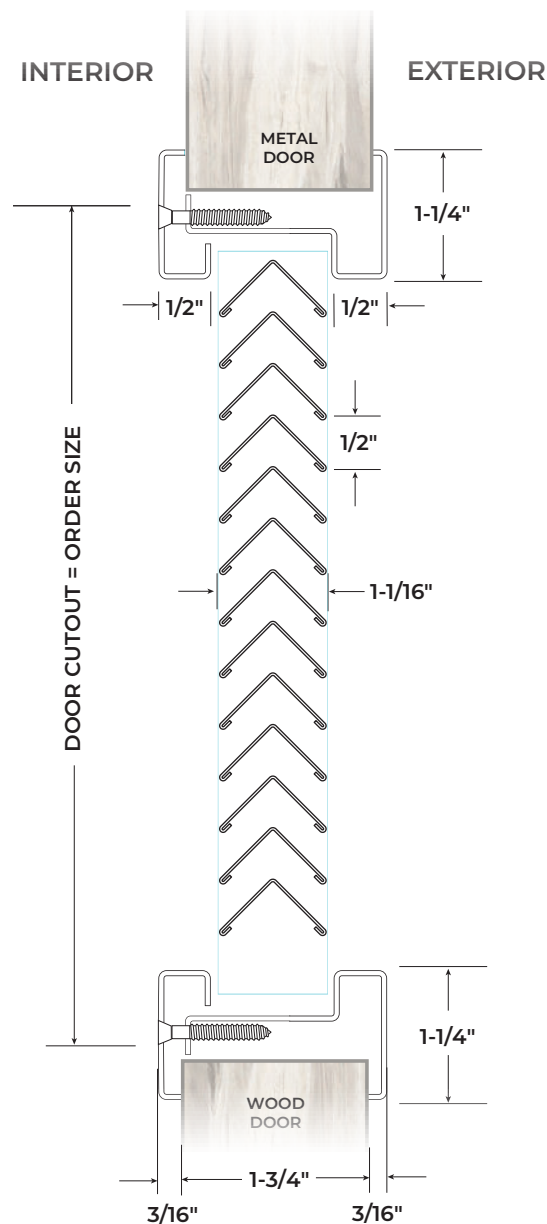

L-700-RX, L-700-RX-SS, L-700-RX-316SS, L-1800, AFDL
undersized 1/8" for clearance
L-VRSG-2 & L-VRSG-3 undersized 1/16" for clearance.