



L-A700 SERIES

No Vision Door and Partition Louver


PRODUCT CUT SHEET

For 1 3/8", 1 3/4" up to 2 1/4" Thick Doors

- Frame .050" Extruded Aluminum
- Blades .050" Extruded Aluminum
- Mitered Corners Secured with Reinforcing Clips
- Inverted "V" Design
- Counter-Sunk Mounting Screw-Holes
- #8 x 3/4" Phillips Head SMS
- Available in Uneven and Fractional Sizes
- Free Area 55%
- Aluminum Silver (ASL) Powder Coat Finish

Available Options

- Powder Coat Color Options - See Color Chart on www.ngp.com
- For Exterior Use Specify Drainage Weep Holes
- Thru-Bolts (TB) for 1 3/4" Thick Doors
- Aluminum Insect Screen - 22 Ga. 1/8" Square Mesh Installed on Exterior Side Unless Requested Otherwise
- Torx Security Screws

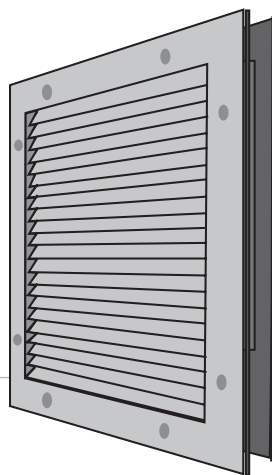


PROJECT:

SUBMITTED BY:

DATE:

NOTES:

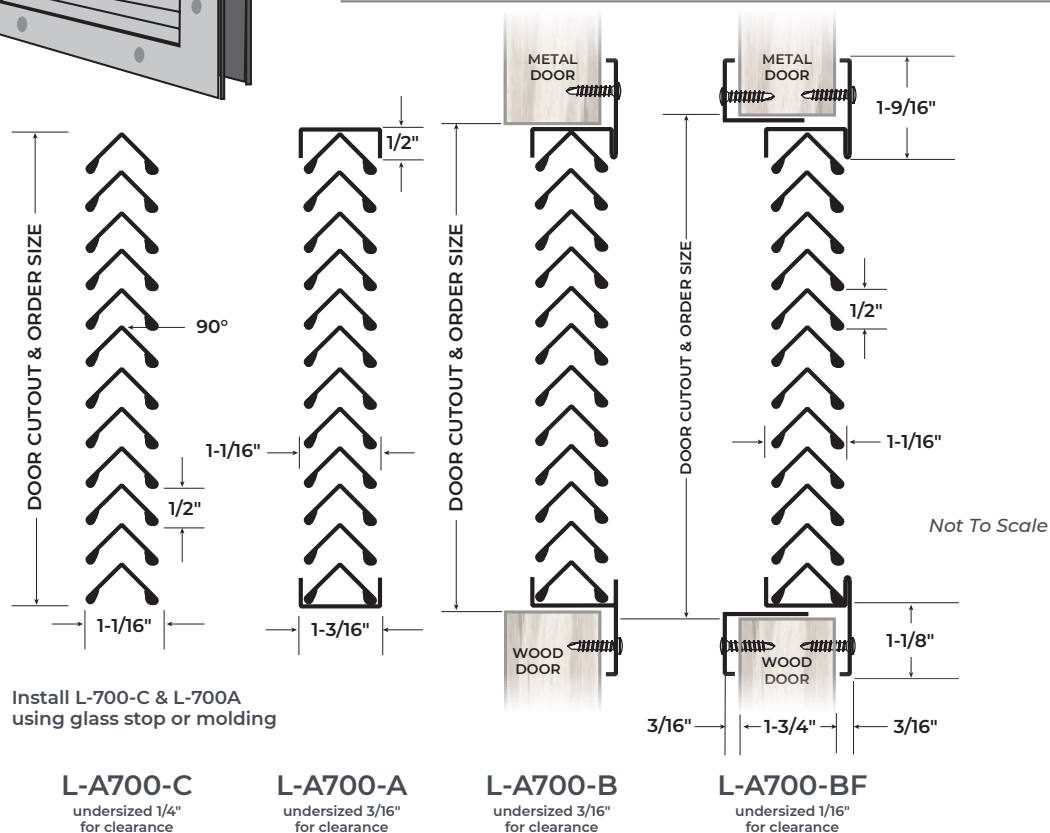

NGP-LIT-L-A700 SERIES-PCS-0123-A

NGP MEMPHIS
4985 East Raines Road
Memphis, TN 38118
orders@ngp.com

NGP VEGAS
4584 Calimesa Street
Las Vegas, NV 89115
vegasorders@ngp.com

ngp.com
1-800-NGP-RUSH

L-700, L-700-A-SS, L-700-A-316SS, L-A700 or FDLS, FDLS-SS, FDLS-316SS, DSFP, DSFP-PERF, DSFP-SS, DSFP-316SS


Louvers: Fit 1-3/8" to 2-1/4" Thick Doors

Installation Instructions

for Louvers with frame

(L-700-B, L-700-BF, L-A700-B, L-A700-BF or FDLS, FDLS-SS, FDLS-316SS, DSFP, DSFP-PERF, DSFP-SS, DSFP-316SS)

1. Cut out door in accordance with door manufacturers procedure.
2. If door cut-outs have radius corners it may be necessary to square them out prior to installing the louver.
3. Position outer frame with louver core, in door cut out, insert and start all screws before fully tightening.
4. Tighten screws using a crisscross pattern. Use caution when using power screw driving equipment to avoid stripping the material.
5. Position inner frame (L-700-BF, L-A700-BF only) and secure to door using the same procedure.

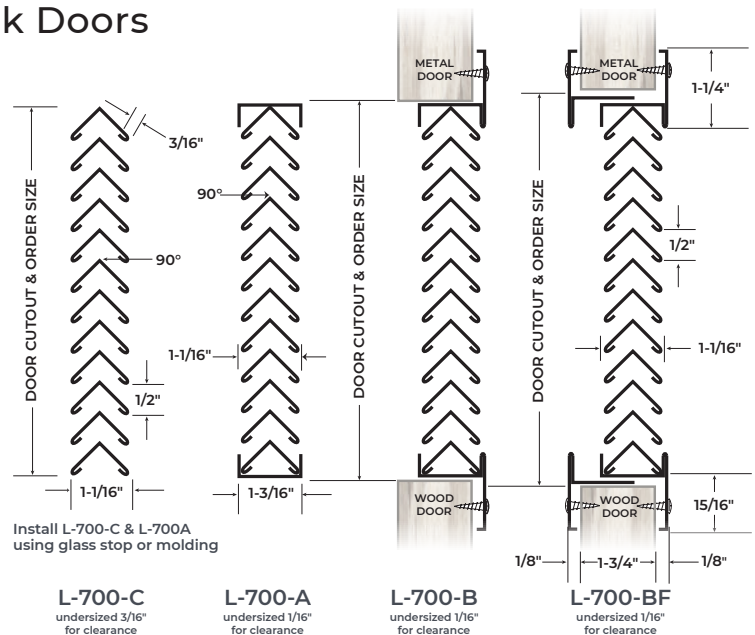

Installation Instructions

for Louver Cores

(L-700-A, L-700-A-SS, L-700-A-316SS, L-700-C, L-A700-A, L-A700-C)

1. Cut out door in accordance with door manufacturers procedure.
2. Install molding or glass stop type material (by others) on one side of where louver is to be mounted.
3. Position louver core and install molding or glass stop type material (by others) on other side to hold louver securely in place.

FIELD PAINTING: For best results scuff finish with a scotch-brite pad prior to painting.

